

GOZEBO CARE AND MAINTENANCE

How to prevent a sagging top,

1. Disconnect the tops & let hang down or take off the top in storms, snow etc.....
2. Make sure the Velcro is very tight & top is snug.
3. Apply a water proof spray to the top for longer lasting use.
4. Manufacture recommends removing canopy top during high winds and inclement weather.

Care and Maintenance of your Gazebo / Pavilion:

- With a natural tendency to rust steel furniture periodically should be touched up with paint and covered.
- Canopy top should be washed with a mild soap and water. Do not use abrasive materials or strong detergents.
- If scratched down to the bare metal, sand with a wire brush or fine grained sandpaper, apply to coats of rust inhibiting paint such as "Rust-Oleum" and follow with a matching top coat.